## MAD Chairs

281 Dining Arm Chair
282 Balcony Arm Chair
283 Bar Arm Chair
284 Dining Side Chair
285 Balcony Side Chair
286 Bar Side Chair

SEASIDE CASUAL

# ASSEMBLY INSTRUCTIONS

**1** **PLEASE READ INSTRUCTIONS COMPLETELY BEFORE BEGINNING.** Carefully remove contents from box. Make sure that all parts and hardware are included using the Parts List below.

**Tools Required:** 4mm Allen Wrench (included); #2 Phillips Head Screwdriver; (Recommended: Rubber Mallet; High Powered Drill)

**Back Assembly**

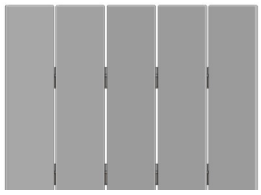

x 1

**Seat Assembly**

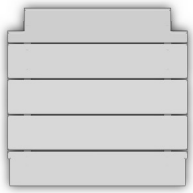

x 1

**Left and Right Side Assemblies**

Right

Left

x 1ea

**Front Apron**

x 1

**Rear Apron**

x 1

**Front Stretcher Assembly**

Bar and Balcony Only

x 1

**Rear Stretcher**

Bar and Balcony Only

x 1

**1-3/4" Phillips Head Screw**

Actual Size

Part Code: 316-8X1-3/4PFDS

**Bar & Balcony Height x 28**
**Dining Height x 22**

**4mm Allen Wrench**

Actual Size

Part Code: 4MMALLEN

x 1

**80mm Hex Lag**

Actual Size



Part Code: 316-1/4-10-80HL

**Bar & Balcony Height x 8**
**Dining Height x 4**

**5/8" Bungs**

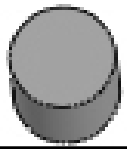

**Bar & Balcony Height x 8**
**Dining Height x 4**

**WARRANTY QUESTIONS OR COMMENTS PLEASE CALL TOLL FREE AT 1-800-809-3114**

## 2 ATTACH APRONS TO SIDE ASSEMBLIES

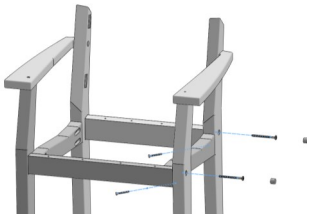

Align Front and Rear Aprons with notches in front and rear legs. Secure with (4) 80mm Hex Lags through counter-bored holes in legs, and (4) 1-3/4" Screws through pockets in Aprons. Plug holes in legs with 5/8" Bungs.

## 3 ATTACH APRONS TO SEAT ASSEMBLY

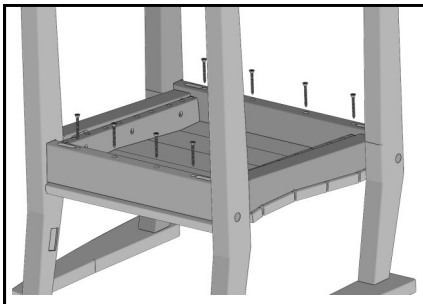

Align Seat Assembly with Aprons. Secure with (8) 1-3/4" Screws through counter-sunk holes in Aprons.

## 4 ATTACH SEAT ASSEMBLY TO SIDES

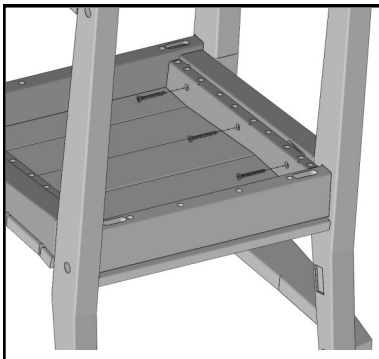

Secure Seat Assembly to Side Assembly using (6) 1-3/4" Screws.

## 5 ATTACH BACK ASSEMBLY

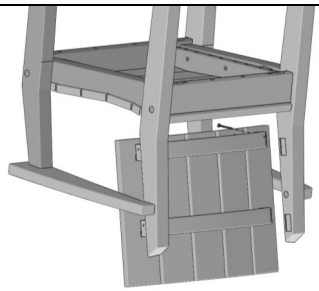

Align Back Assembly with the notches in the rear legs. Secure with (4) 1-3/4" Screws through pockets on Back Stretcher as shown.

## 6 ATTACH FRONT AND REAR STRETCHERS (282, 283, 285, 286 ONLY)

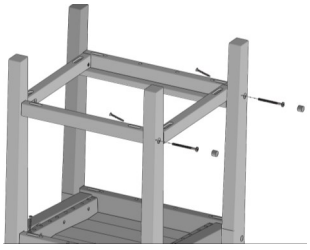

Align Front Stretcher to Front Legs and Rear Stretcher to Rear Legs. Secure using (4) 80mm Hex Lags through counter-bored holes in legs, and (4) 1-3/4" Screws through pockets in bottom of Stretchers. Plug holes in Legs with 5/8" Bungs.

## 7 ATTACH SIDE STRETCHER TO FRONT STRETCHER (282 & 283 ONLY)

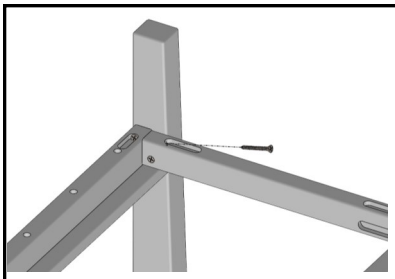

Attach Side Stretcher to Front Stretcher using (2) 1-3/4" Screws.